


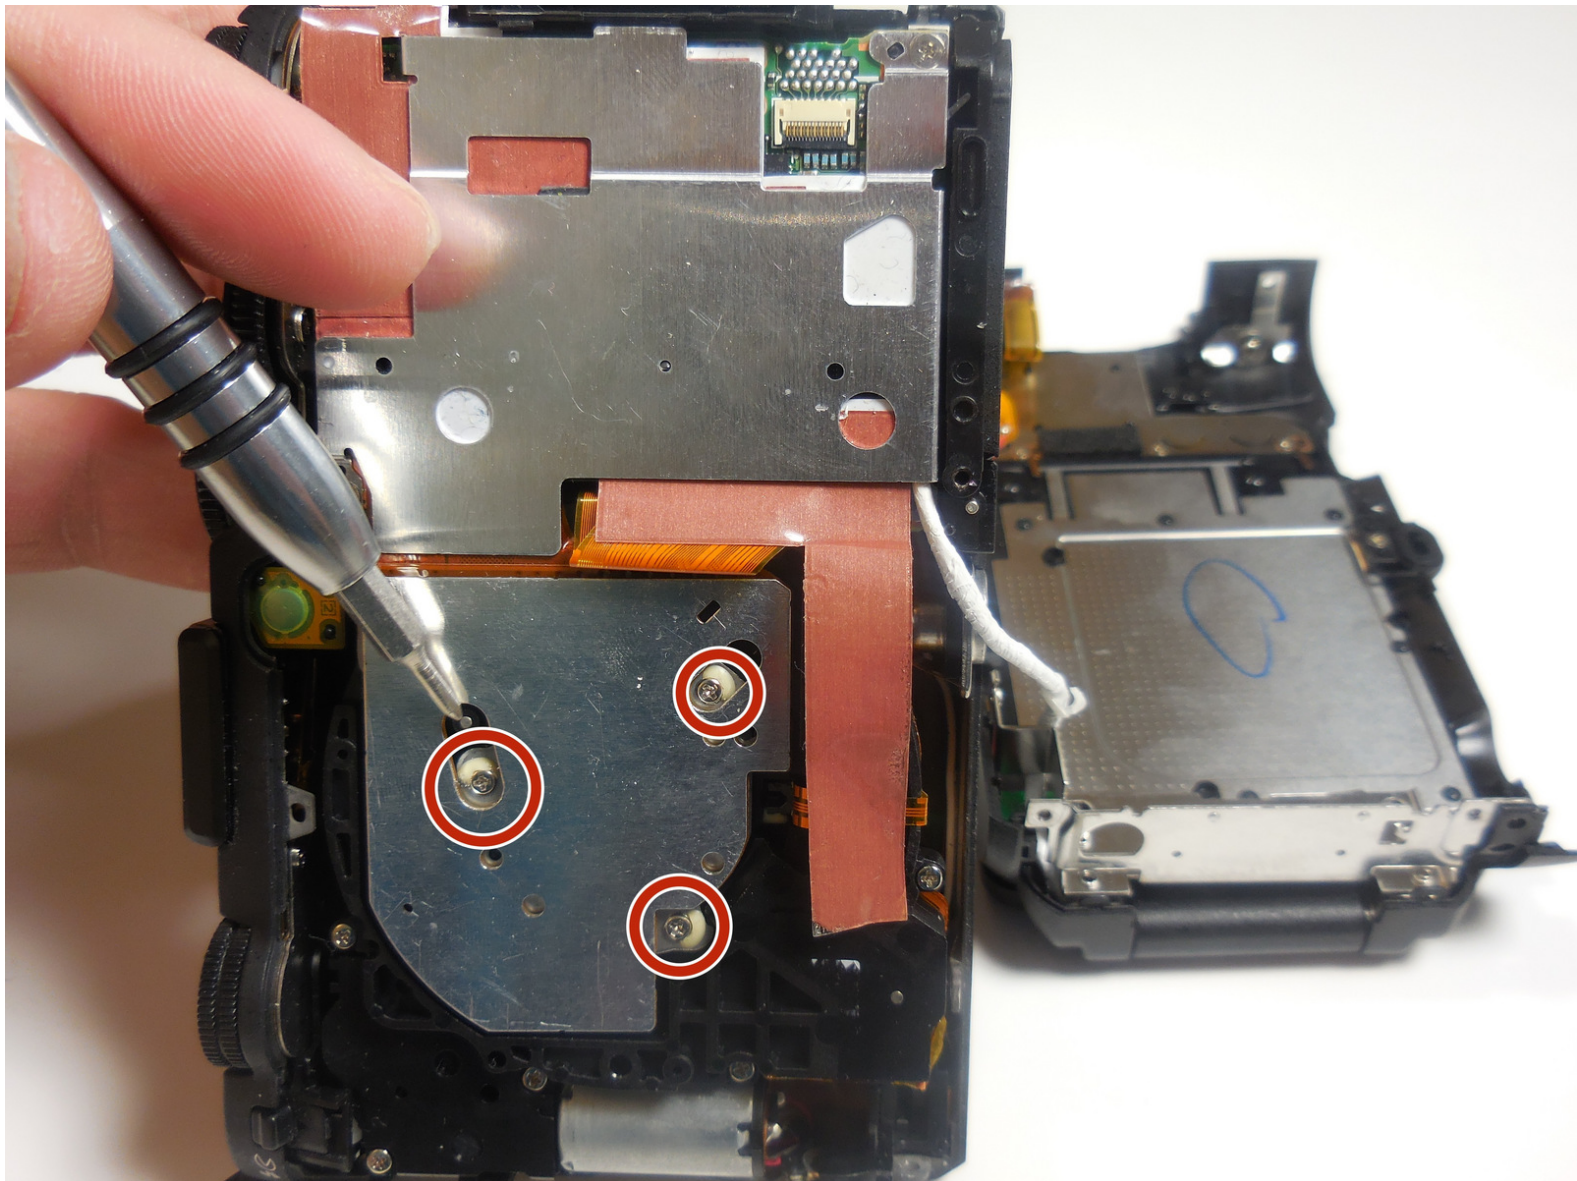

# Nikon COOLPIX P7700 Reflective Mirror Replacement

This guide will show how to replace a Nikon COOLPIX P7700 Reflective mirror.

Written By: Dustin Wahl



## INTRODUCTION

By following these ten steps one can effectively replace the Nikon COOLPIX P7700 camera's internal reflective mirror.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Casing



- Turn camera to the left side and remove the two 4.3 mm black side screws using the Phillips #00 screwdriver.
- Remove the side panel.

## Step 2



- Open the touch screen, and remove the three 4.3 mm black screws inside using the Phillips #00 screwdriver.



### Step 3



- Remove the 4.3 mm black screw on top of the camera, right above where the screen folds out. Use the Phillips #00 screwdriver.

### Step 4





- Remove the two 4.3 mm black screws on the right side of the camera using the Phillips #00 screwdriver.

## Step 5



- Remove the 4.3 mm black screws on the bottom of the camera using the Phillips #00 screwdriver.


## Step 6

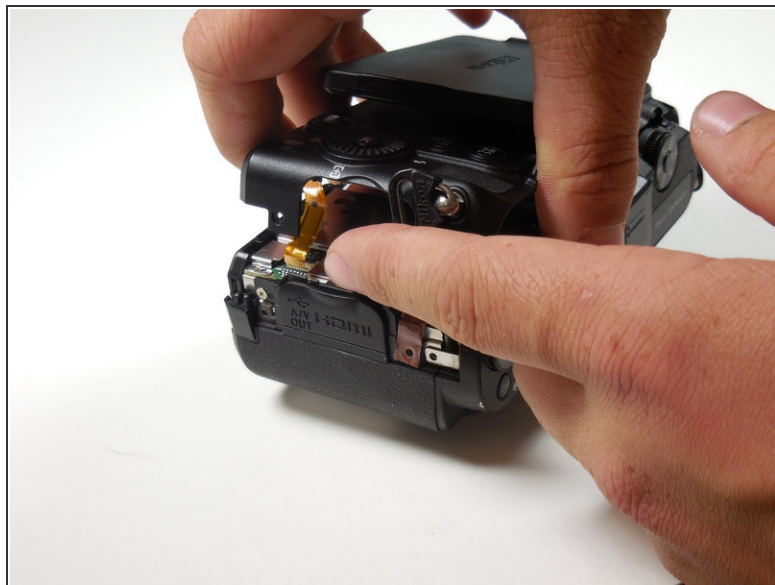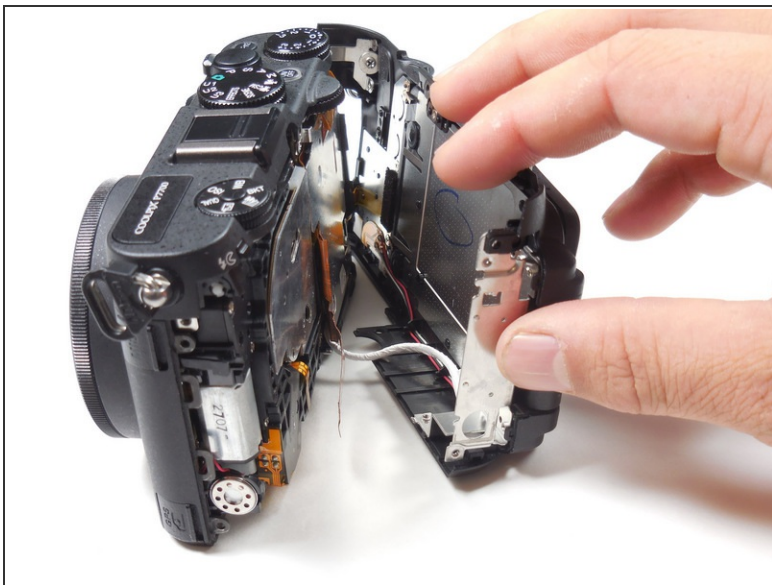

- Begin separating the camera into two parts.



**i** It is okay to remove the orange ribbon. This will be easily put back into place when re-assembling.

## Step 7

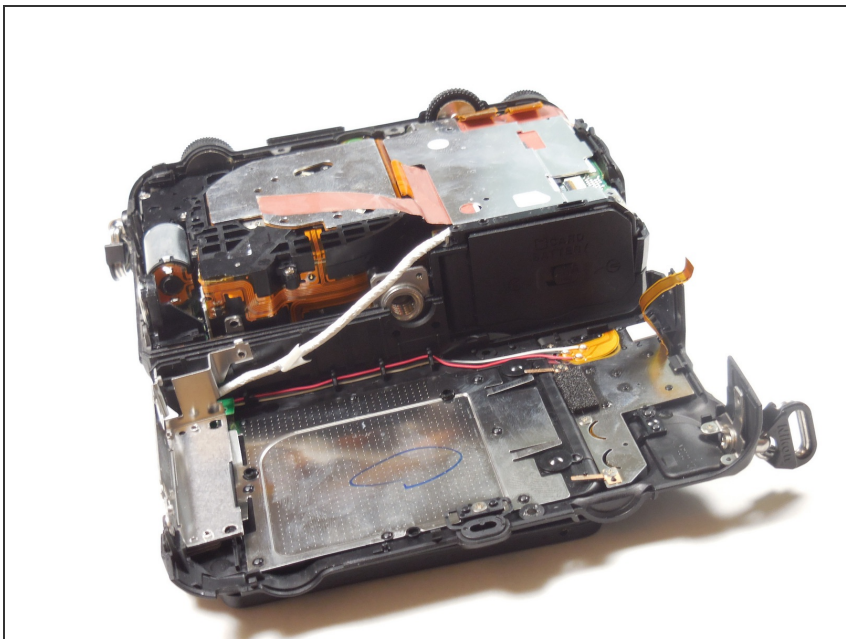

- Remove the back casing.

## Step 8 — Reflective Mirror

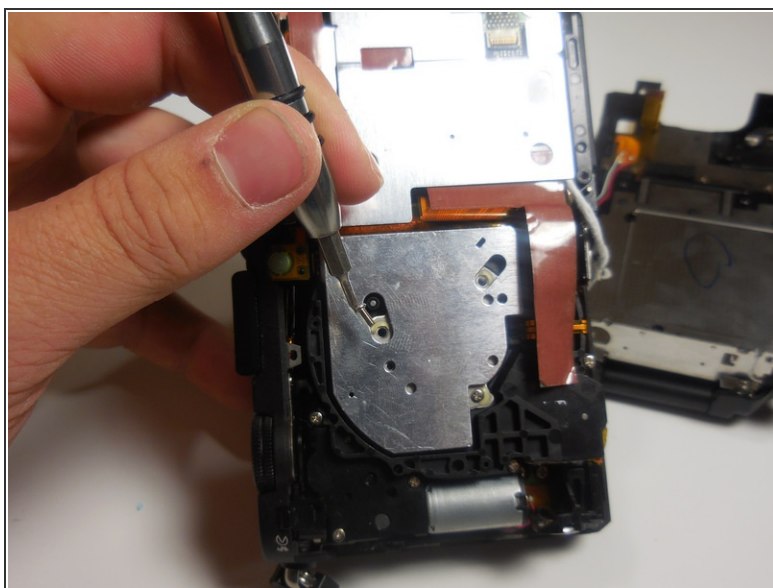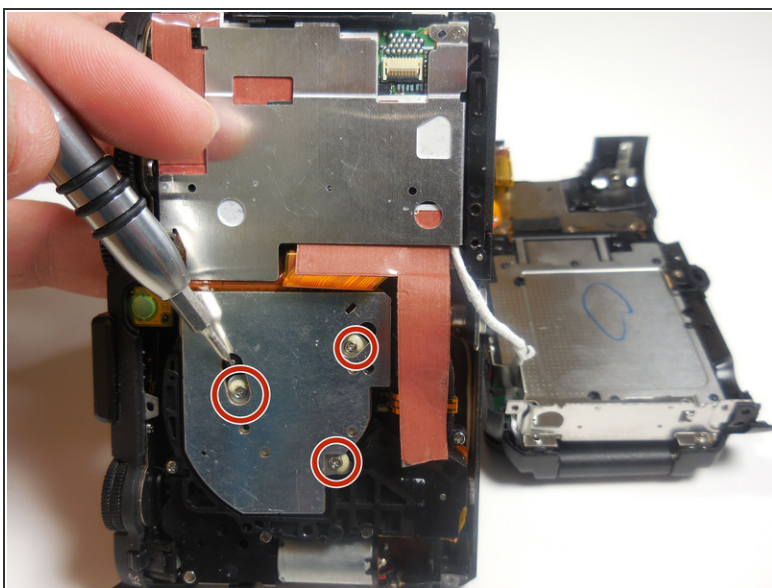


- Remove the three 4.3 mm screws on the right metal sheet using the Phillips #00 screwdriver.

**i** It is okay to remove the orange ribbon.




## Step 9

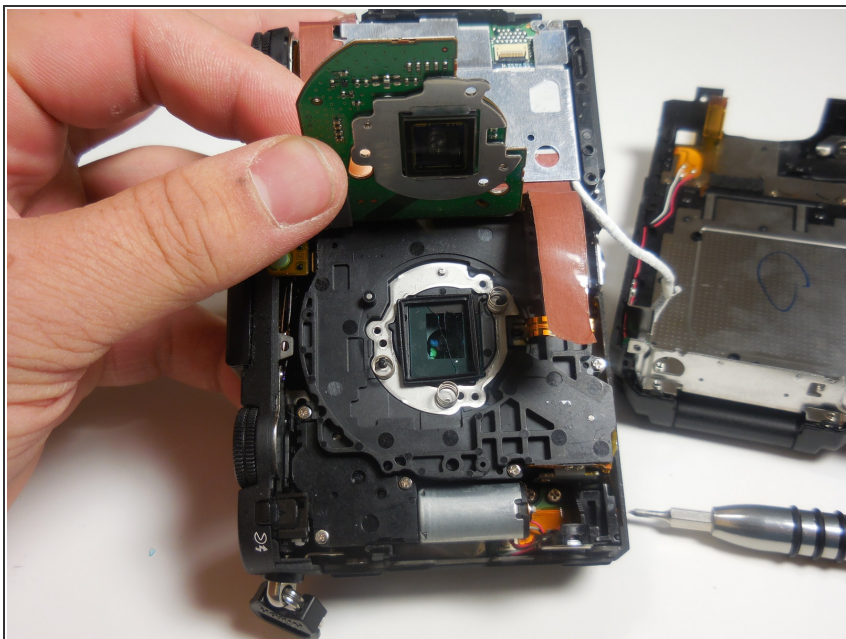

- Lift the metal sheet up to locate the reflective mirror.

## Step 10

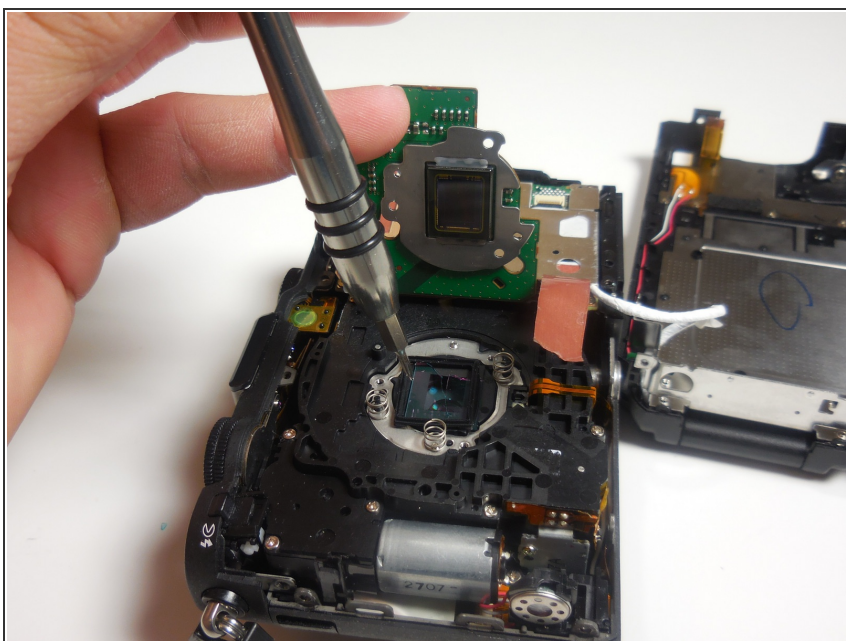

- Remove and replace the reflective mirror.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:57:19 AM.